

# ultraframe

## Classic










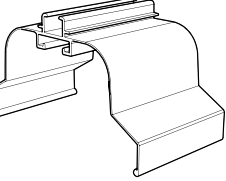
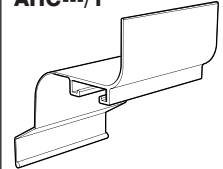
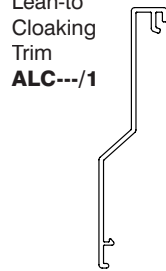
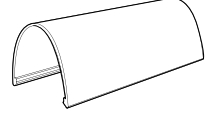

Please pass this guide to the homeowner  
once installation is complete.

## Aluminium Roof Installation

Version 2.0  
March 11

# Product Identification

Glazing bar clip (Std) <b>ABC001</b> 	Glazing bar clip (Valley) <b>ABC002</b> 	Aluminium Transom Top Cap <b>ATC---/25</b> 	Aluminium Transom Top Cap <b>AOC---/25</b> 	Aluminium Georgian Top Cap <b>AGC---/25</b> 
Aluminium Starter Top Cap <b>ASC---/25</b> 	Gasket <b>AGS305</b> 	Aluminium Full Ridge Radius End Cover <b>ACP001</b> 	Aluminium Half Ridge Radius End Cover Left <b>AHC001L</b> 	Aluminium Half Ridge Radius End Cover Right <b>AHC001R</b> 

Aluminium Ball Finial <b>ACF001</b> 	Fixing - Finial adaptor M8x50 HD screw <b>ACC002</b> 	Radius end clamp washer <b>ACP003</b> 	Standard twin bolt and nuts <b>SHBC001T</b> 	Radius end flashing trim <b>ACP004</b> 	Brush - half ridge radius end cover <b>AHC002</b> 
Brush - full ridge radius end cover <b>ACP002</b> 	Aluminium Ridge Top Cap <b>ACP---/1</b> 	Aluminium Half Ridge Top Cap <b>AHC---/1</b> 	Lean-to Cloaking Trim <b>ALC---/1</b> 	Aluminium low profile cresting <b>ALP---/1</b> 	Aluminium Finial <b>ACC001</b> 

- Recommended tools** - Glazing hammer/Mallet, 6mm drill bit
- Additional materials** - Small timber block
- Protective film** - Peel back and remove after installation. Safely dispose of the redundant film.

Please read in conjunction with the main installation guide supplied in the roof








If storing in warehouse racking or on frails/roof racks, take care to support the products and do not over tension straps and ropes.




When opening sealed packs, use a special box knife opener.



Take care when fitting aluminium products to not use excessive force.

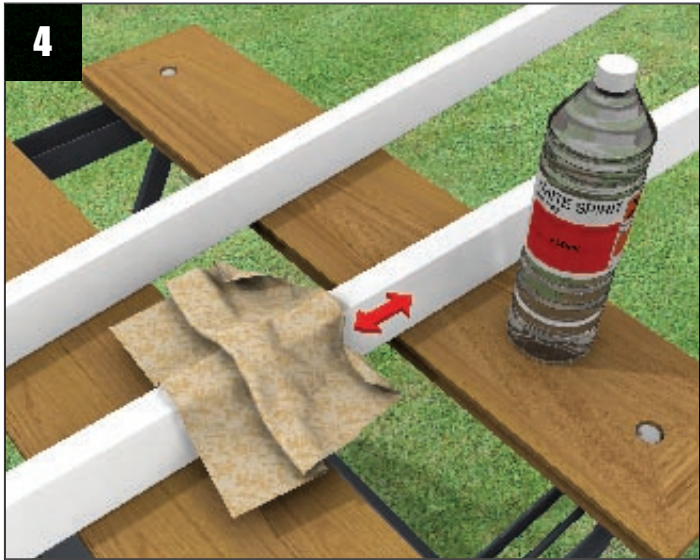


Grease marks, dirt and mastic spillage may be removed using white spirit.

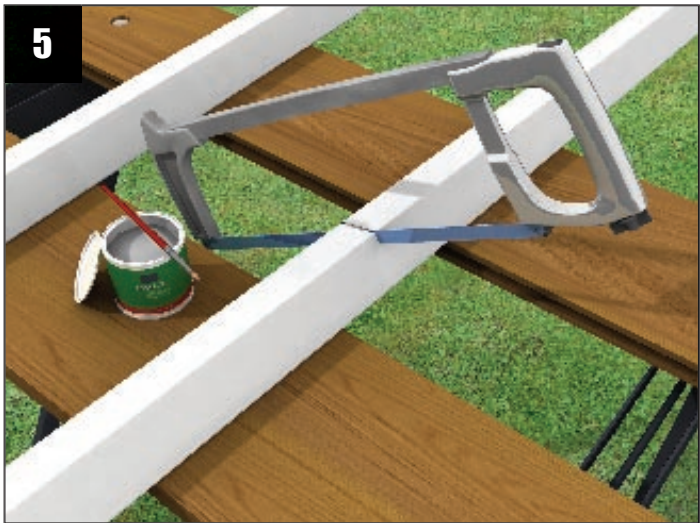


If site cutting is necessary (drainage slots need inserting or a down pipe hole has to be cut) ensure all swarf is kept away from the painted surface and then; seal with a primer/corrosion inhibitor and then top coat. Alternatively, use a suitable gap sealant to prevent the onset of corrosion. These steps are critical in marine environments.




Ensure the eaves beam, glazing bars, ridge/wallplate are already installed. Ensure the top cap clip spring is in the loaded and primed position (as shown).

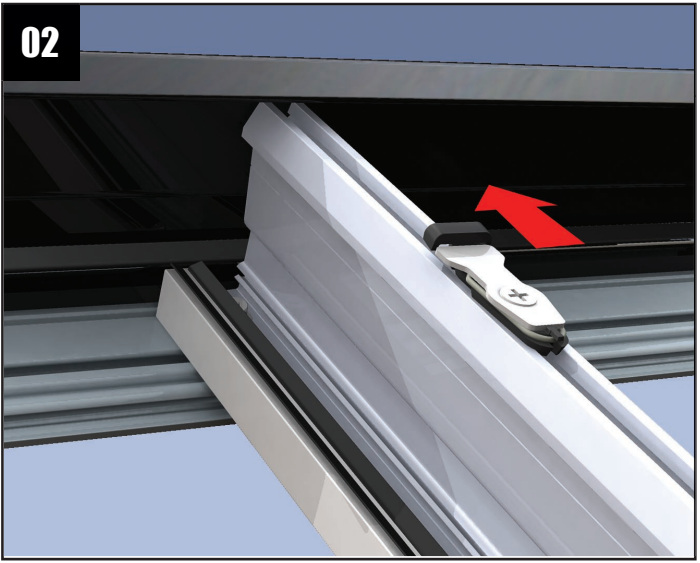

Ensure the clip is orientated as shown, with 'trigger' towards the ridge.

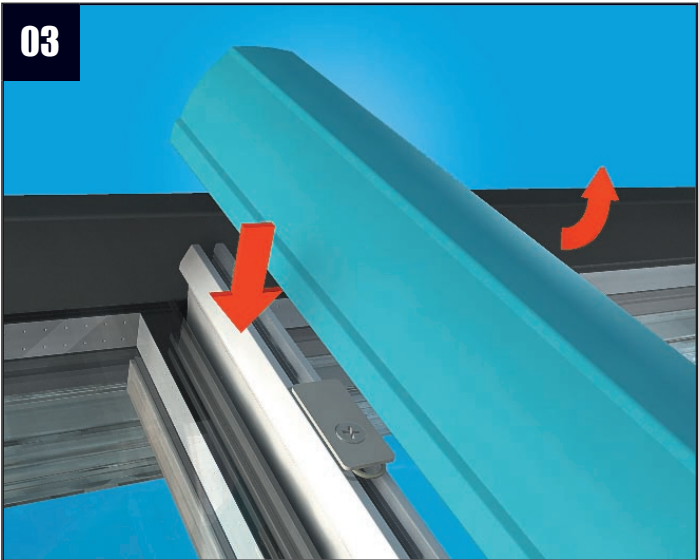

Ensure the rain baffle upper wing is lifted prior to fitting the top cappings.

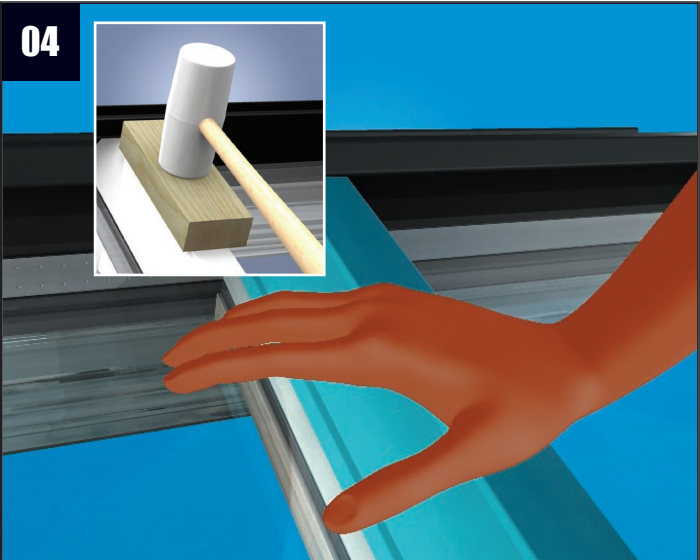

Knock the glazing bar top cappings on with a glazing hammer/mallet and timber block. Each capping is numbered according to its position in the roof.




Drill a 6mm hole, then use the fixing provided (CRN010) to attach the top cap to the glazing bar. (Not required if using Cornice with wire ties)




Fit the glazing bar end caps by sliding onto the plastic fixing blocks. Push fit the insert into the end cap.




# Installation

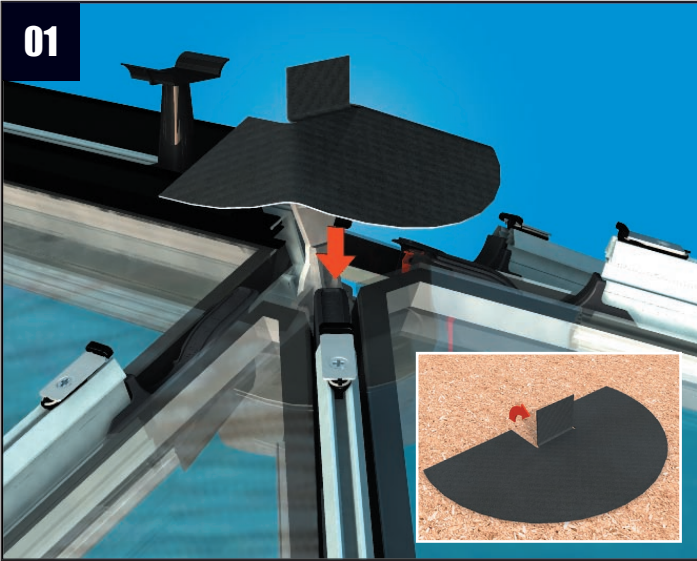


Remove protective film then fold up tab on flashing trim. Place flashing on roof and form to shape. Mark trim lines (dependant on roof style)

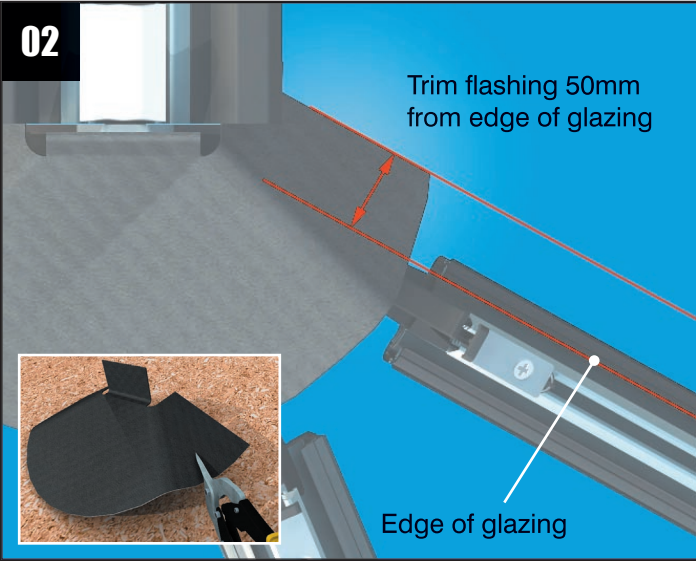


Trim Flashing

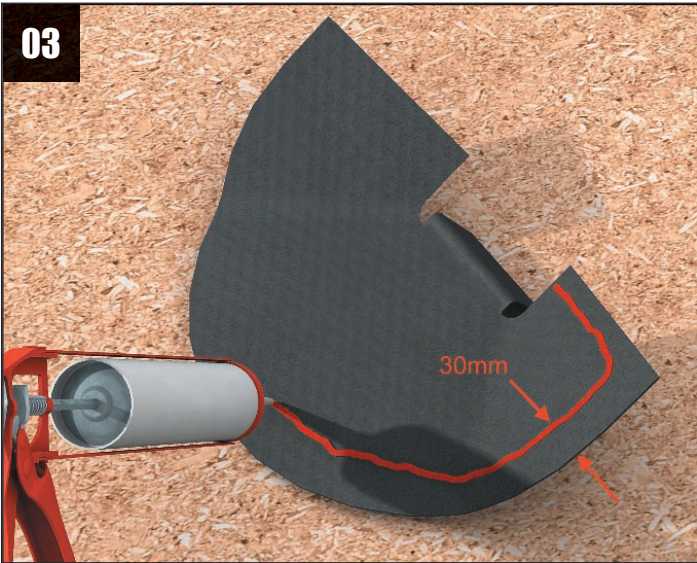


Apply supplied Gutterbond to underside of flashing.

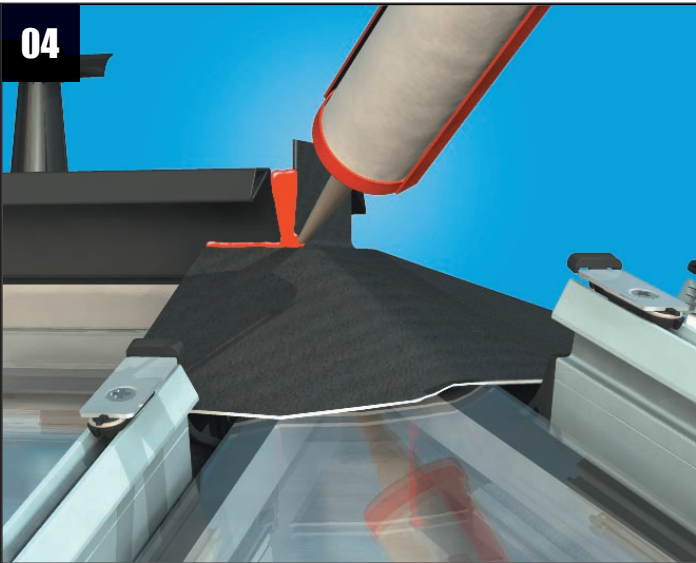


Fit flashing trim pushing firmly into place, ensuring intimate contact with glazing. Seal all interfaces between flashing and rain baffles.

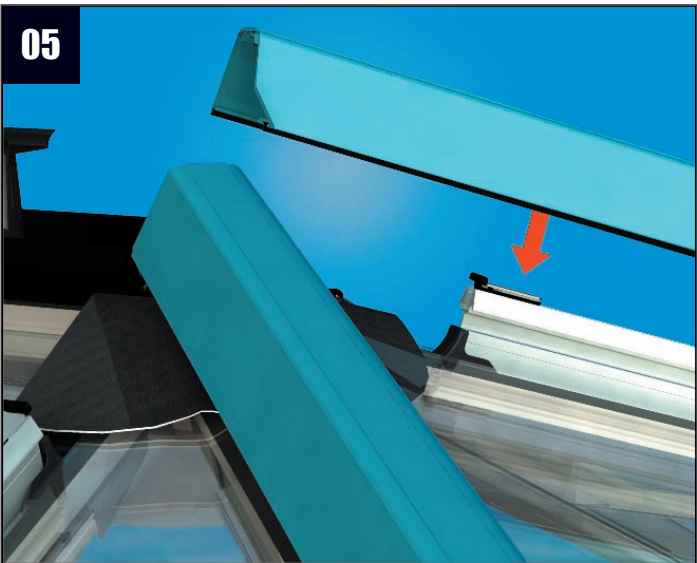


Install bar caps, securing flashing into place. Point around bar caps.

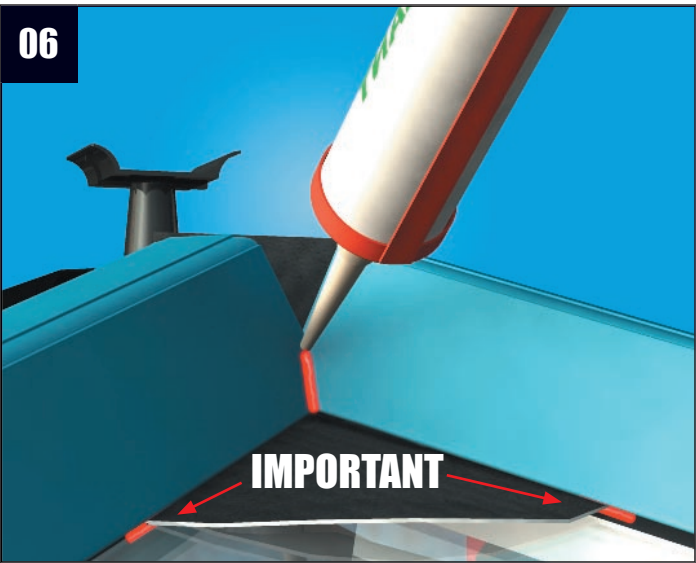


Discretly 'point' the junctions between the capping gaskets and radius end flashing as shown (use new uncut nozzle).

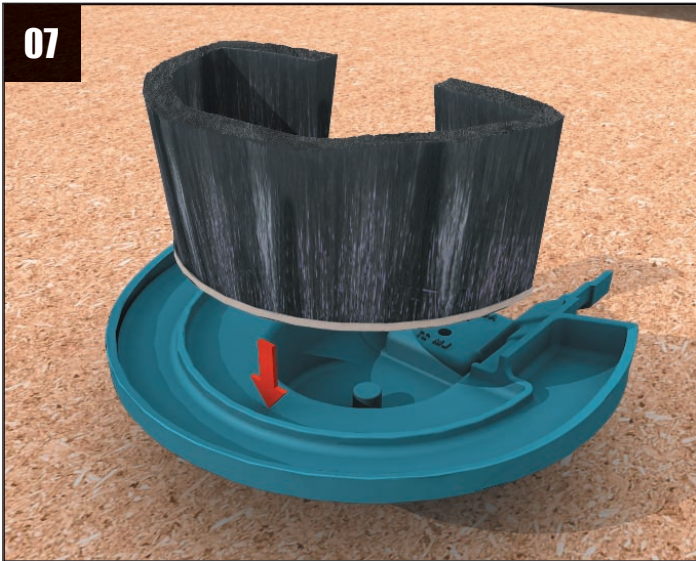


Fit radius brush.

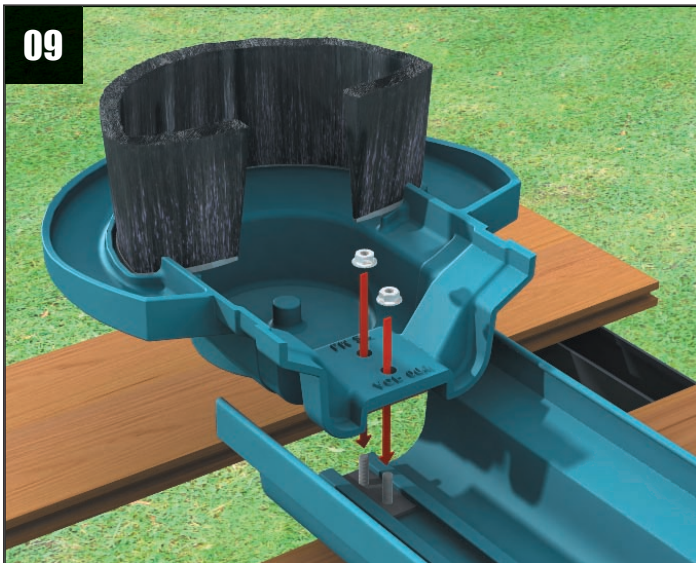


Assemble and secure radius end to ridge top cap with spigot nuts supplied.

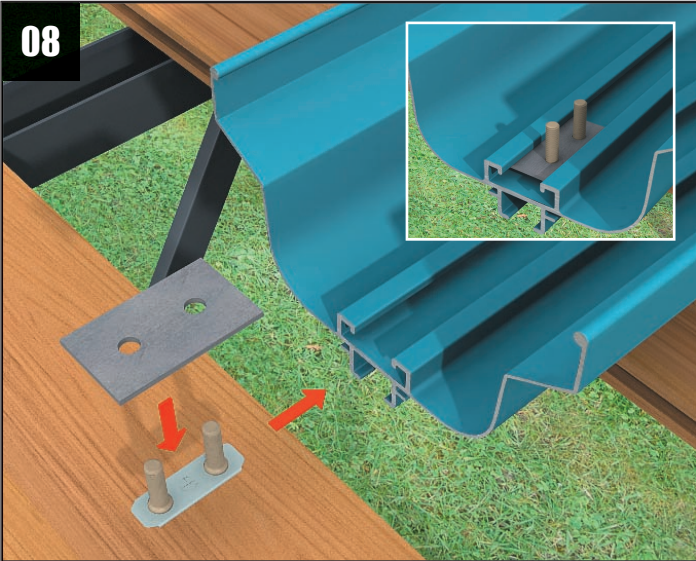


Assemble twin bolt and radius end clamp washer. Slide into ridge top cap.

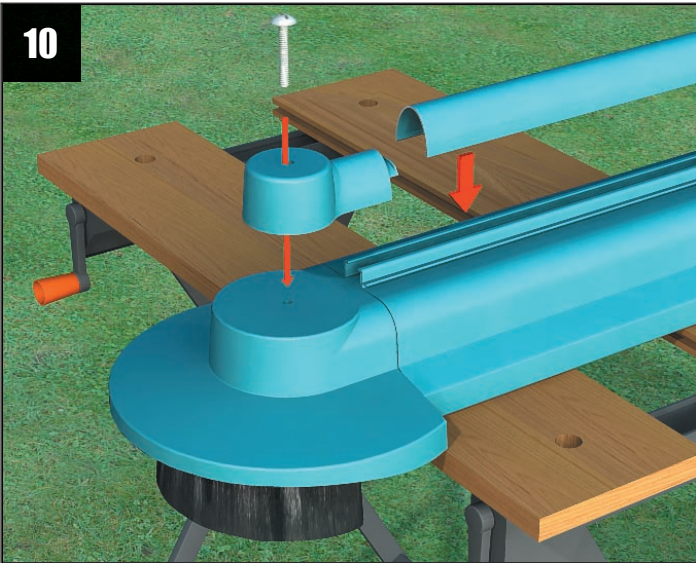

Low profile cresting. Assemble as shown.

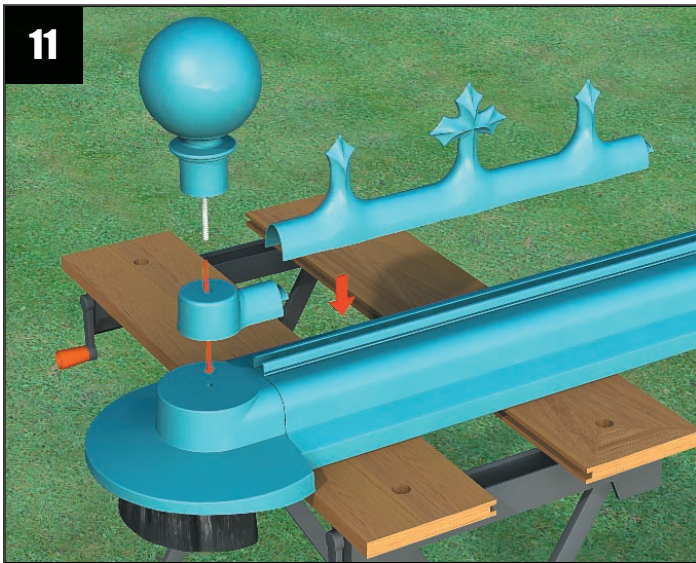

Ball finial cresting. Assemble as shown.

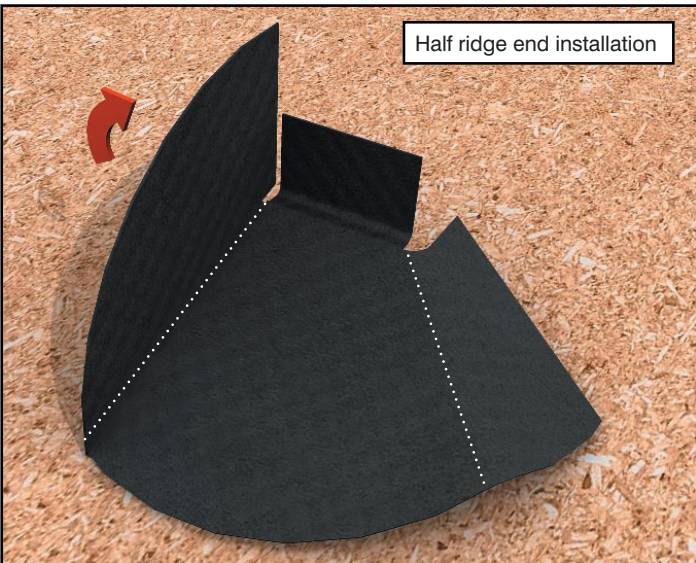


The half ridge end flashing detail should be folded as shown and fitted in a similar manner to that of the full ridge end.




# Installation

## Jack Rafter Situation

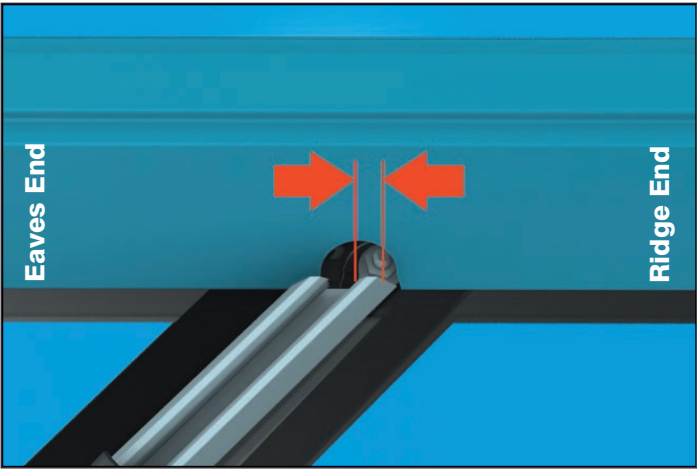


Position the glazing bar top cap so the cut out sits in the below the jack rafter fixing.

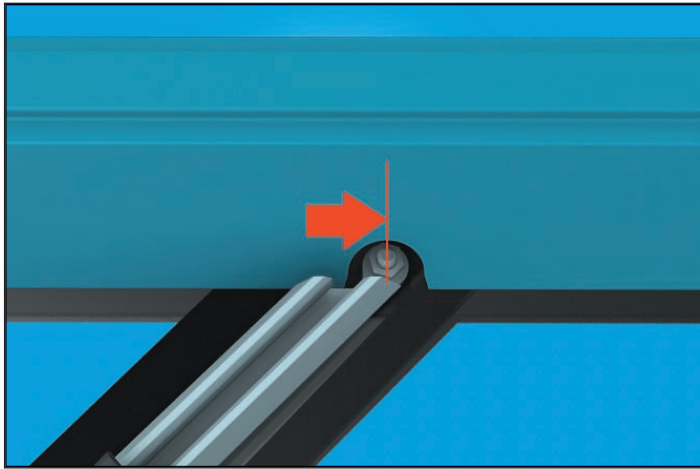


Tap the glazing bar top cap up until the cut out sits central to the jack rafter fixing

## Lean To Cloaking Trim Installation

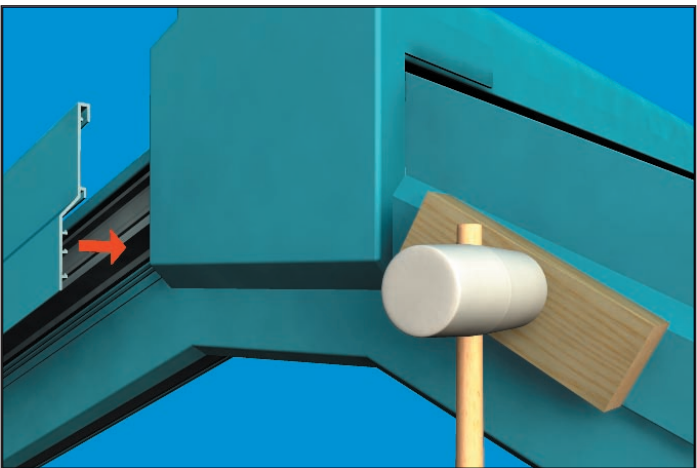

Knock the lean to cloaking trim on with a deadblow hammer and timber block. It may require trimming at the eaves end - take care when trimming powder coated aluminium.

## Removing The Glazing Bar Top Caps

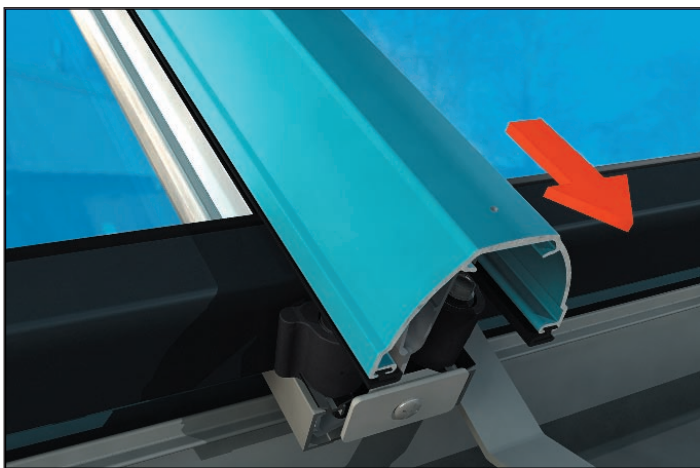


Slide the end cap up and off the fixing block and unscrew the fixing at the end of the glazing bar (reverse steps 05 and 06). Slide the glazing bar top cap down to release it from the spring loaded clip. To re-install repeat steps 1-6.

## Valley Jack Rafter Fixing



Ensure the clip is orientated as shown, with 'trigger' towards the ridge.

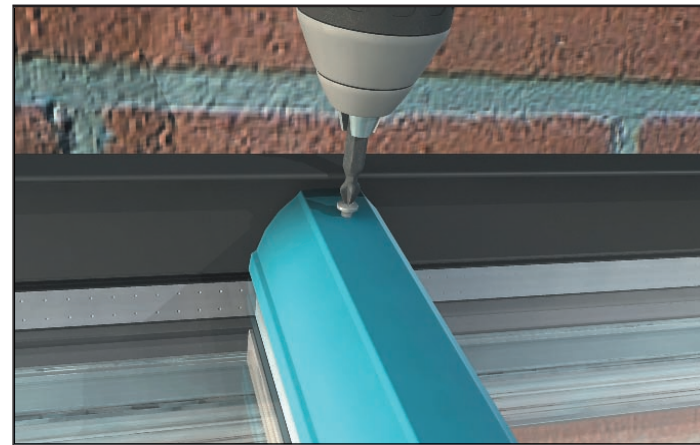

Drill a 6mm hole at the ridge end under the rain baffle wing . Use the fixing provided (CRN010) to attach the top cap to the glazing bar.

# Appendix 1

Before commencing installation of the aluminium cappings, ensure that the spring clip retention device is loaded and primed. Please see the images below which relate to the different bar situations.


### ABC001 - Clip reload sequence

Transoms, jack rafters, starters bar and hip bars without jack rafters (factory pre-installed at 500mm ctrs)




### ABC002 - Clip reload sequence

Valley rafters and hip bars with jack rafters (factory pre-installed at 250mm ctrs)

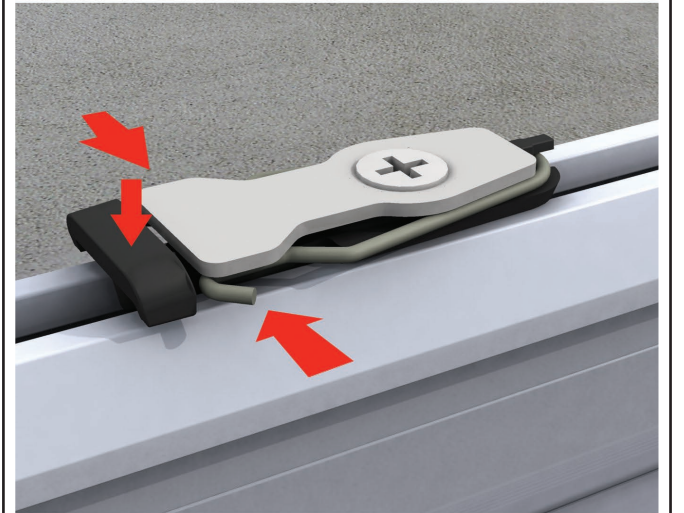





# Cleaning and Maintenance

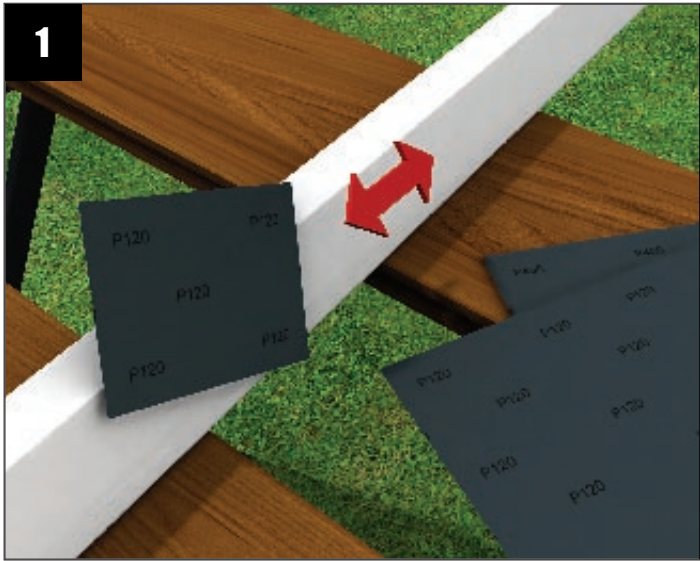


If surface damage is encountered, use 120-360 grit paper to prepare the surface. Wipe clean with white spirit.

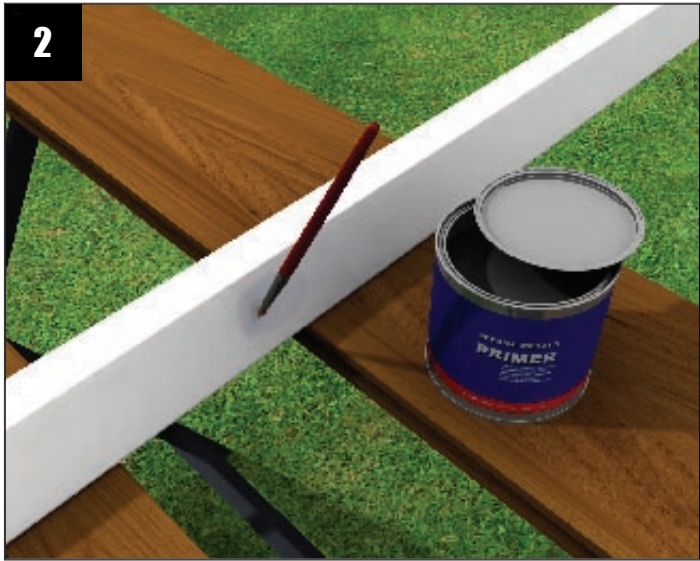

Ensure the surface is dry – apply a thin primer coat using a fine brush.

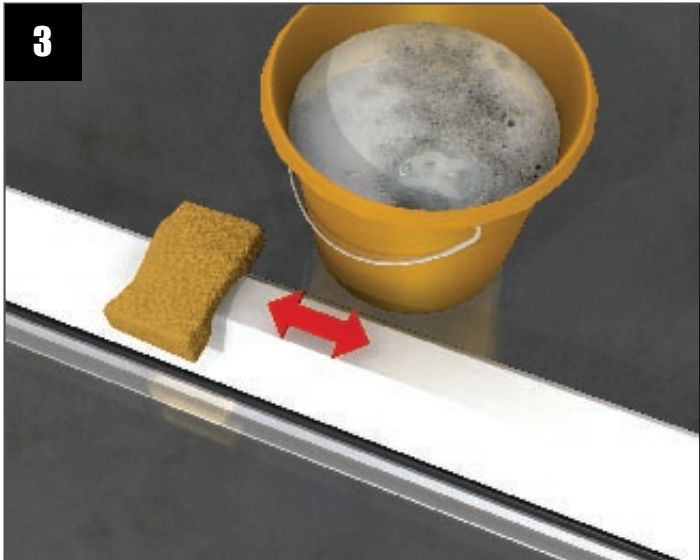


General cleaning can be undertaken by a wash with warm soapy water.

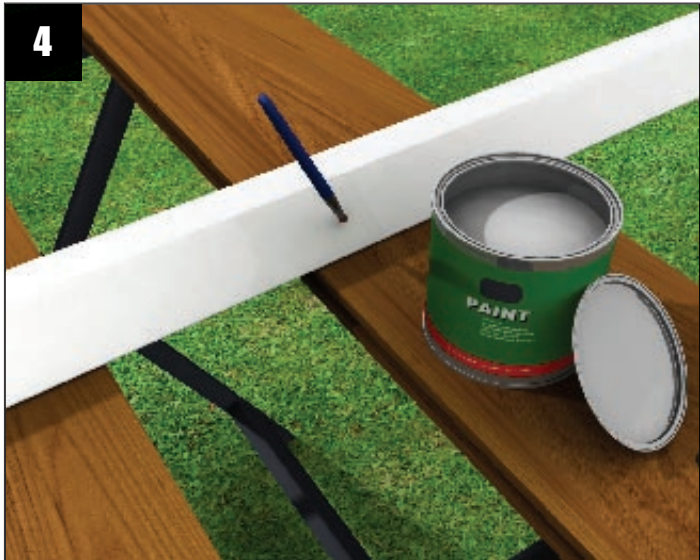

Finally, apply an air drying top coat with a fine brush.



Stubborn marks can be removed using a renovating cream like CIF or perhaps T-cut. Once dry, buffing can take place.

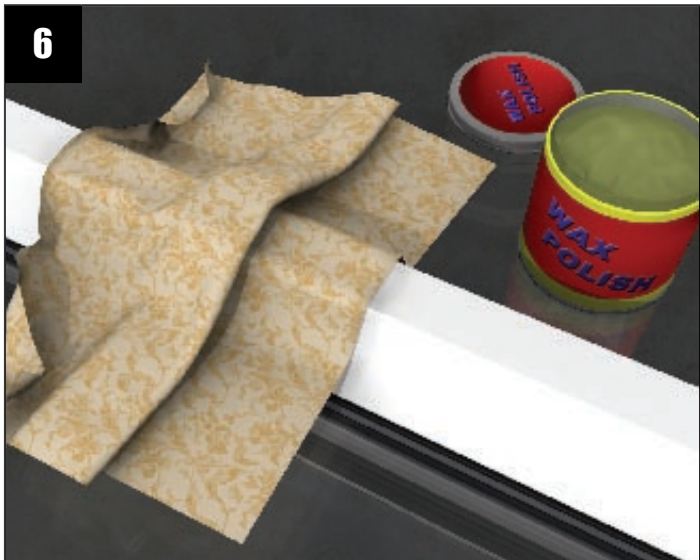

For added protection, a wax polish can be applied up to twice per year – follow the polish manufacturer's instructions carefully.

It should be noted that polyester powder coatings are not maintenance free – the extent of cleaning depends upon the local environment and on the attitude of the building owner. Think cars here...if the building owner wants a finish like that, more regular cleaning is needed. All paints will 'chalk' to some extent and there will be a reduction in gloss level over time – this can be restored.

# ultraframe

Ultraframe (UK) Ltd, Salthill Road, Clitheroe, Lancashire. BB7 1PE

[www.ultraframe.co.uk](http://www.ultraframe.co.uk)

Ultraframe is a trading name of  
Ultraframe (UK) Ltd.

It is Ultraframe's policy to continually seek to improve its products, processes and services, and we reserve the right to change specifications without prior notice. Ultraframe is a trading name of Ultraframe (UK) Limited.

???????? 01/10